




## EXHAUST TIP

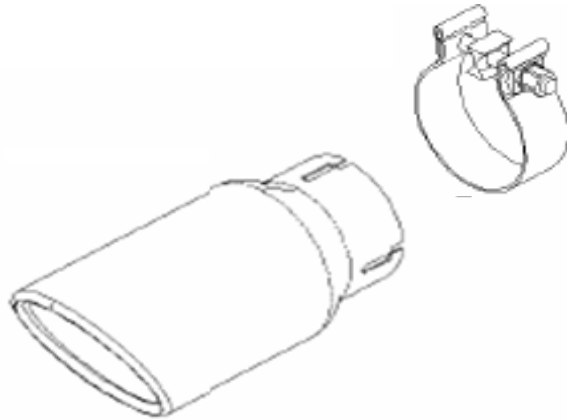

**Torque**  
**35 FT-LBS**  
**(47.5NM)**

**GB**

### INSTALLATION INSTRUCTION - EXHAUST TIP

- The tailpipe on the vehicle does not need to be cut in order to install the tip.
- The tip may be positioned to the owner's liking. The tip should protrude 1.5" beyond the stock opening to "hide" the end of the stock pipe.

**E**

### INSTRUCCIONES DE MONTAJE - LA BOQUILLA DEL TUBO DE ESCAPE

- No es necesario recortar el tubo de escape del vehículo para instalar la boquilla.
- La boquilla puede colocarse al gusto del propietario. La boquilla debe sobresalir 1.5" (3.8cm) del tubo, a fin de "esconder" el extremo del mismo.

**F**

### NOTICE DE MONTAGE - LA TÊTE D'ÉCHAPPEMENT

- Il n'est pas nécessaire de couper la tubulure arrière d'échappement pour installer la tête.
- Le propriétaire peut positionner la tête à son goût. La tête doit dépasser de 1,5 pouces (3,81 cm) l'ouverture standard pour "cacher" l'extrémité de la tubulure standard.