





JEEP SRT 8 DOOR ENTRY SILL

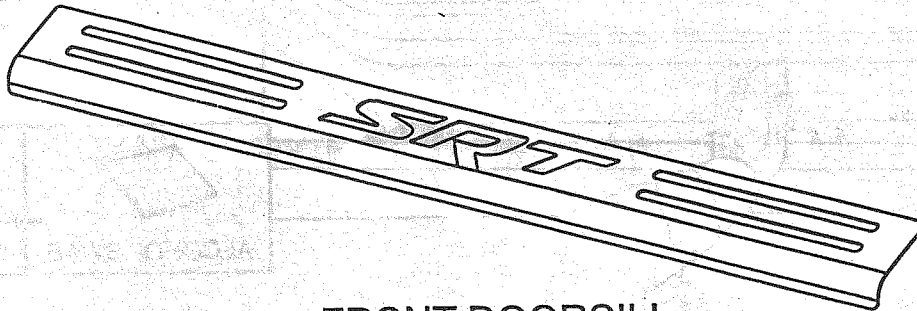


FRONT DOORSILL
2X


A

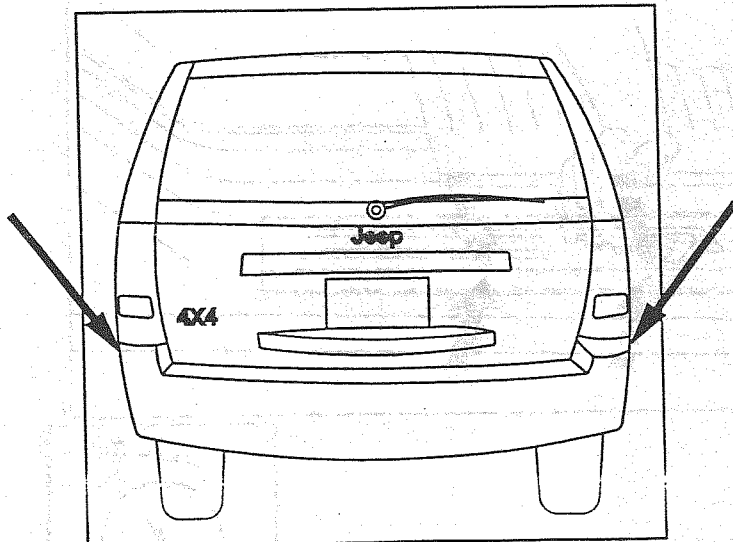

1




97°F
35°C
52°F
15°C

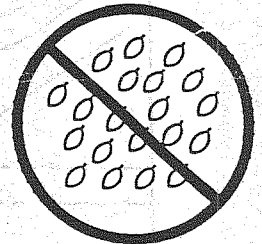



2

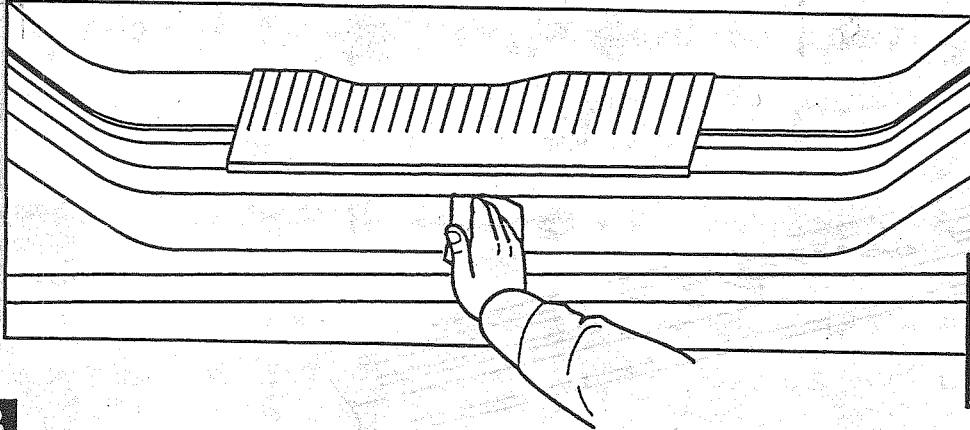


JEEP SRT 8




FRONT


 ALCOHOL SWAB	 Wait 5 min.
---	--

3

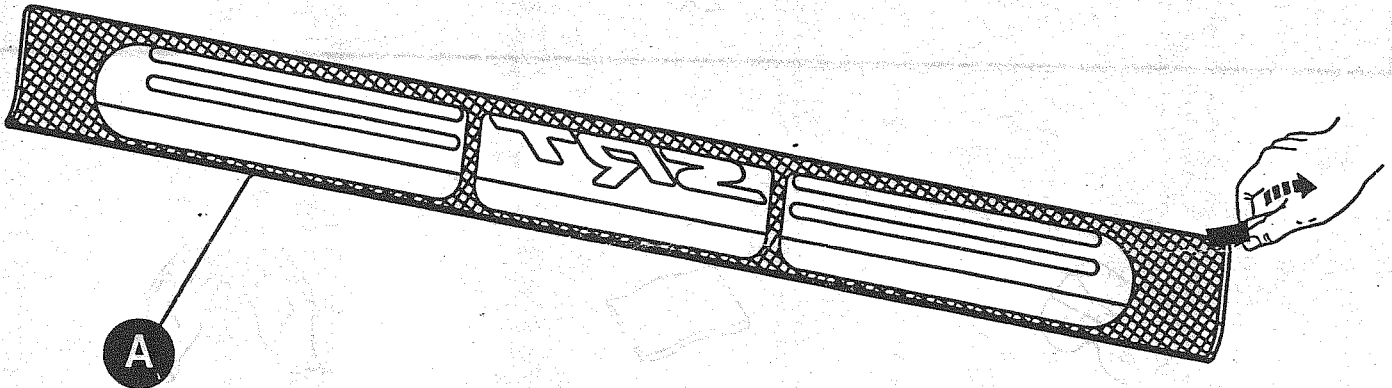

4 COMPLETELY REMOVE THE BACKING(LINER) OF THE TAPE.

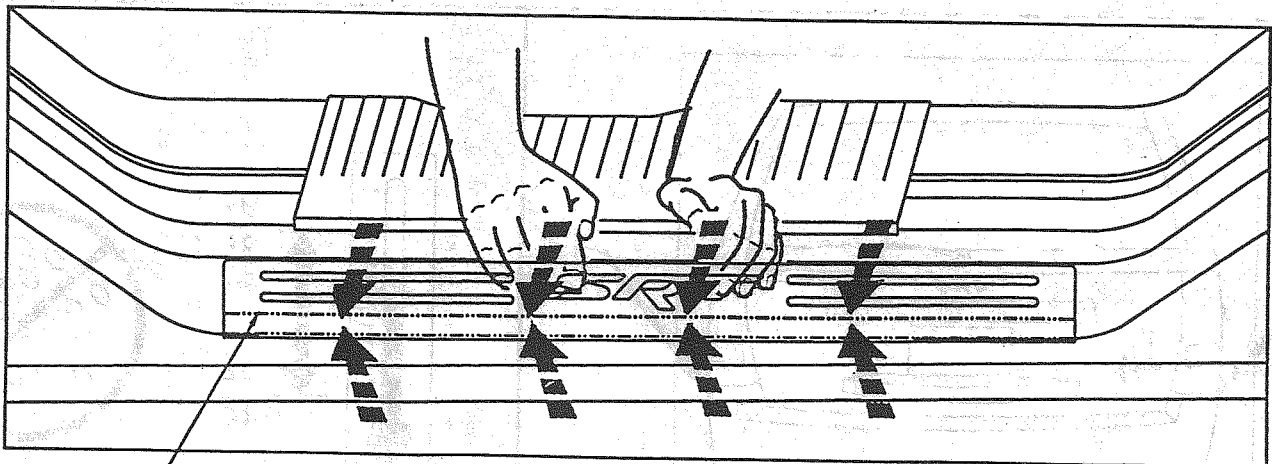

 5 min.

5

COMPLETELY REMOVE THE PROTECTIVE LINER OF THE SILL AFTER INSTALLATION..