


- GB** INSTALLATION INSTRUCTIONS **BRITE TREAD SKID PLATE APPLIQUE**
- E** INSTRUCCIONES DE MONTAJE **GUARDABARROS TRASEROS DE GOMA - PLANOS**
- F** NOTICE DE MONTAGE **BAVETTES GARDE-BOUE PLATES EN CAOUTCHOUC ARRIERE**

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous reserve de modifications techniques


Expert fitment required
Montaje solo por el concesionario
Mantaje par specialiste necesarie

06-20-03 **K6858822**


© DAIMLERCHRYSLER

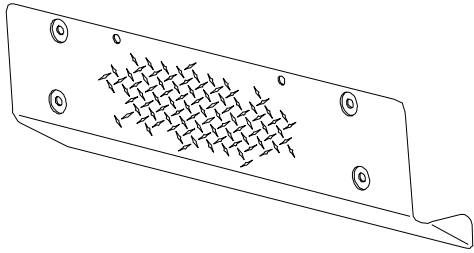


A 1X

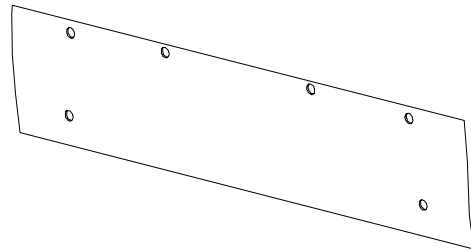

B 1X

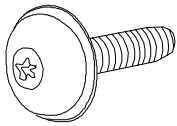


C 4X



D 4X



T55
T40


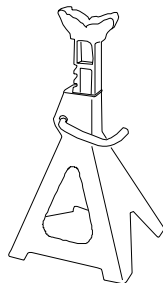


2X





10 mm



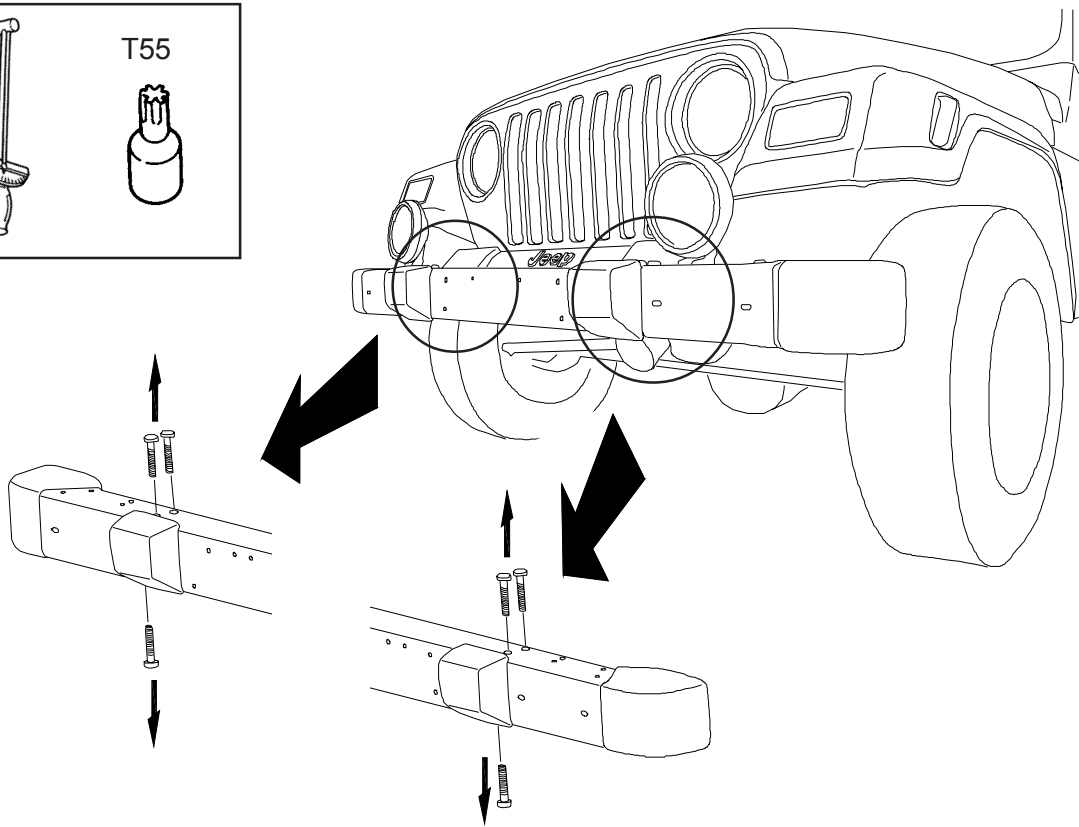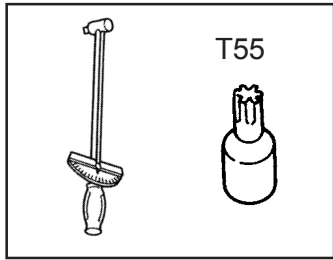

1

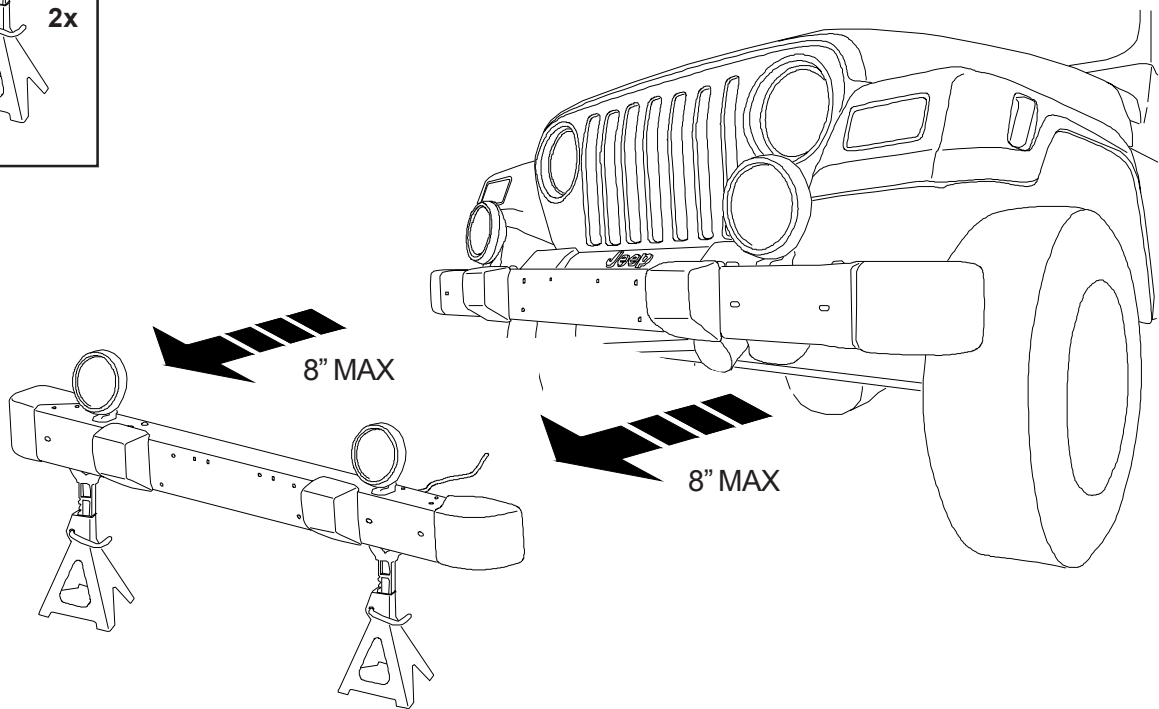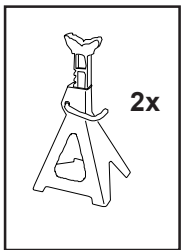

2

