




GENUINE ACCESSORIES

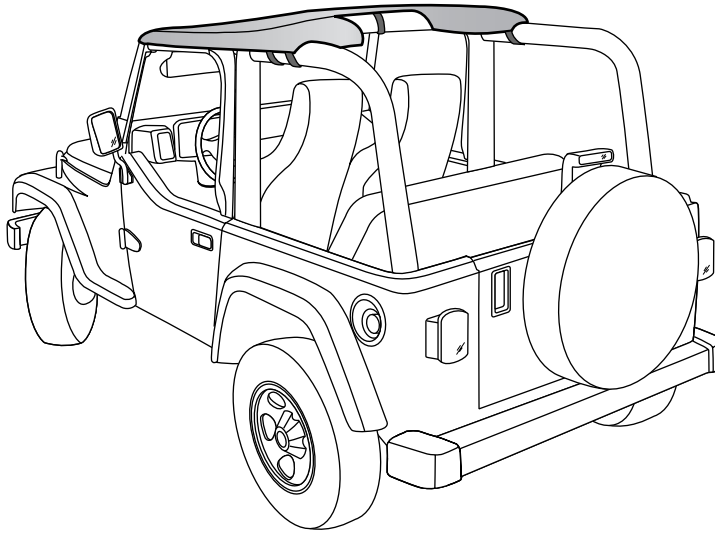

GB

INSTALLATION INSTRUCTION

Parts must not be fitted until registration of the vehicle has been obtained.

SUNBONNET

E

INSTRUCCIONES DE MONTAJE

No se permite montar las piezas antes de registrar el vehículo.

F

NOTICE DE MONTAGE


Ne pas monter les pièces avant l'enregistrement du véhicule.

JP

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques


2003	82207733
2003	82207734
2003	82207948
2003	82207949

© DAIMLERCHRYSLER

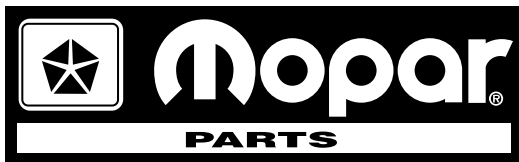

GENUINE ACCESSORIES


Sunbonnet

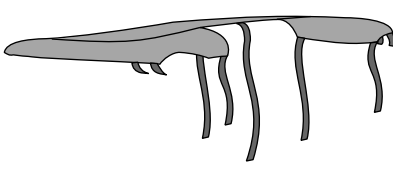

A

Bracket Hard Top Only


X2

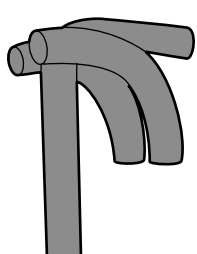

B


Cap Hard Top Only

X2




C

SOFT TOP VEHICLE

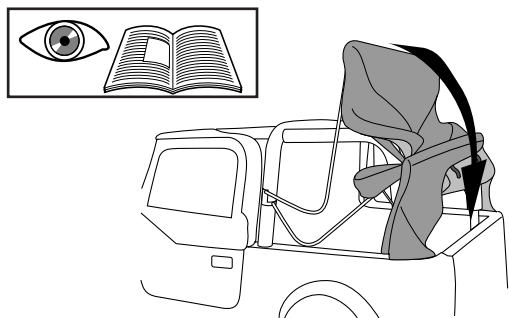


1 Release the front of the top from the windshield and lay the bows down. Refer to owner's manual for instructions to remove top.

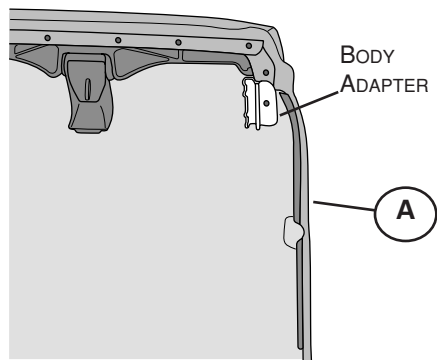


2 Orient the Sunbonnet with the body adapter toward the front.

HARD TOP VEHICLE

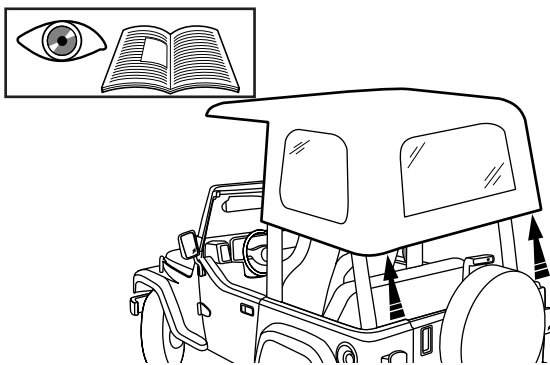

1 Remove the hard top. Refer to owner's manual for instructions.

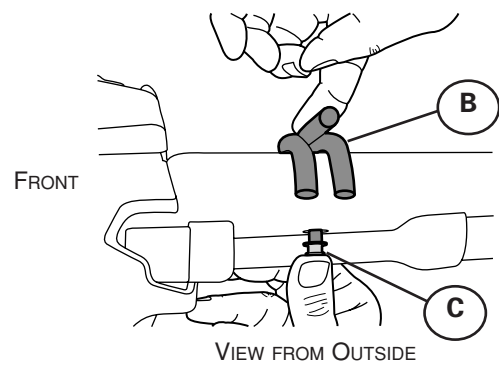


2 Place the Bracket into the hole in the sport bar above the door on each side of the vehicle. Secure it with a Cap.

GENUINE ACCESSORIES


SOFT TOP VEHICLE

X2

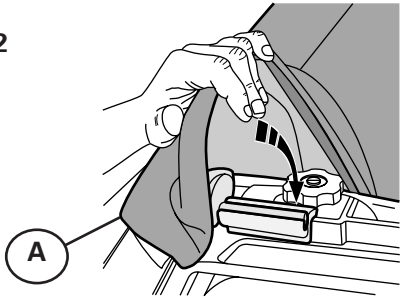

3


Place the Sunbonnet on the vehicle. Hook the body adapter on each side over the ledge of the door surround.

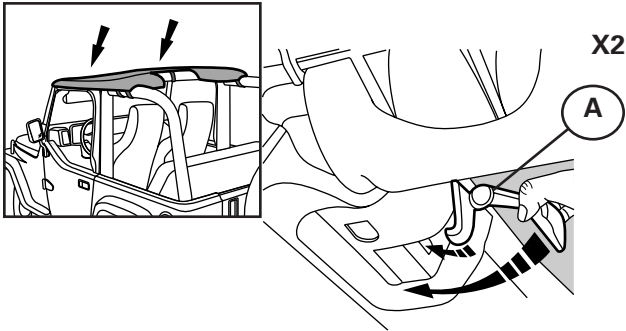

4

Latch the front of the Sunbonnet to the windshield.


X2

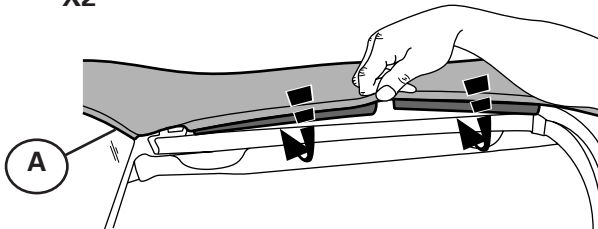

5

Roll the two plastic strips above each door opening into the channel above the door on each side of the vehicle.


HARD TOP VEHICLE

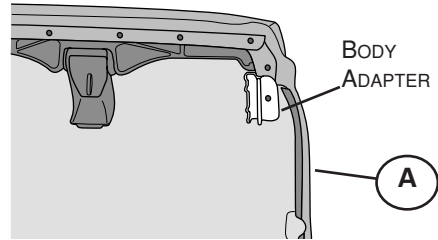

3


Orient the Sunbonnet with the body adapter toward the front.

X2

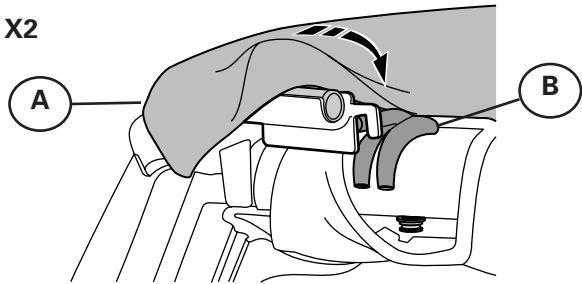

4


Place the Sunbonnet on the vehicle. Hook the body adapter on each side over the brackets installed earlier.

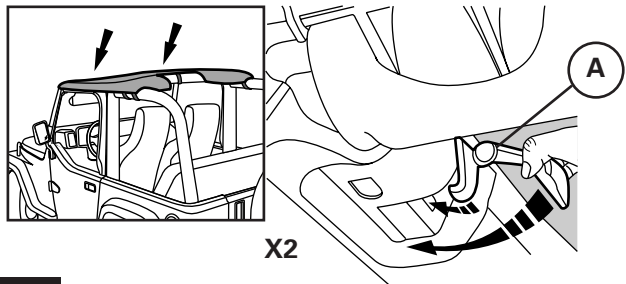

5

Latch the front of the Sunbonnet to the windshield.

X2

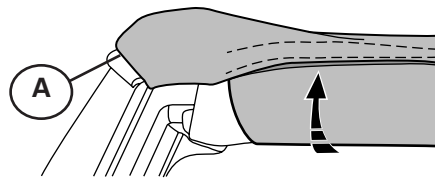

6

Wrap the flaps above the doors around the sport bar and fasten the hook and loop strips to each other.




Mopar


PARTS

GENUINE ACCESSORIES


SOFT TOP VEHICLE

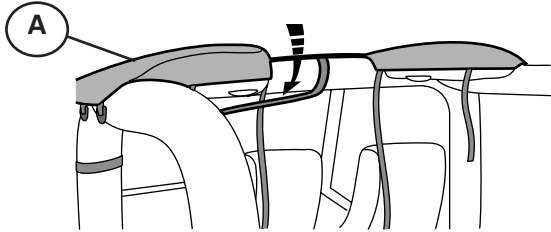

6 Pull the long strap around the sport bar and toward the front of the vehicle.

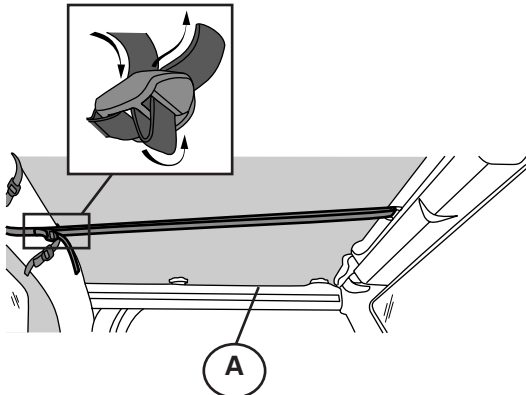


7 Thread the strap through the footman loop above the windshield. Pull the end of the strap back and thread it through the buckle. Pull it tight.

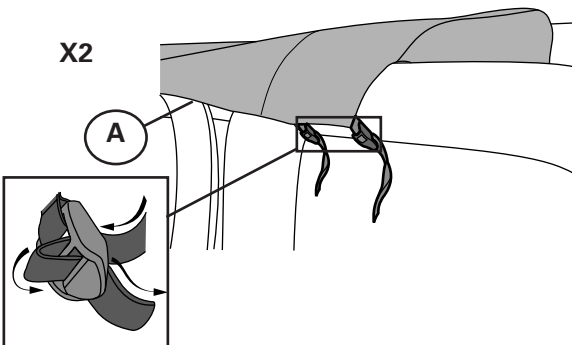


8 Wrap the straps on the rear of the Sunbonnet around the speaker pods, two straps on each side. Thread them through the buckles.

8 Tighten all straps.


HARD TOP VEHICLE

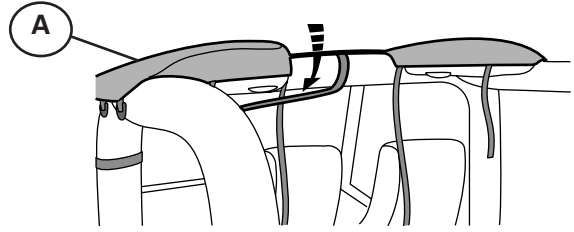

7 Pull the long strap around the sport bar and toward the front of the vehicle.

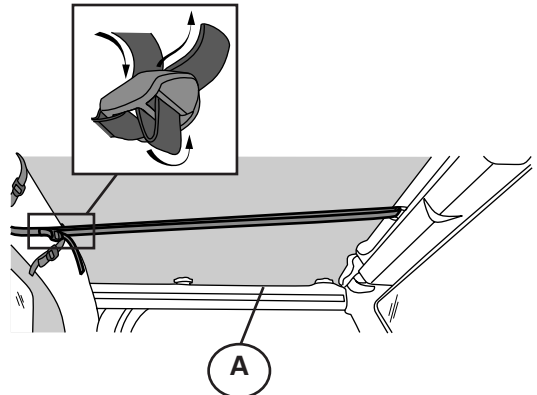

8 Thread the strap through the footman loop above the windshield. Pull the end of the strap back and thread it through the buckle. Pull it tight.

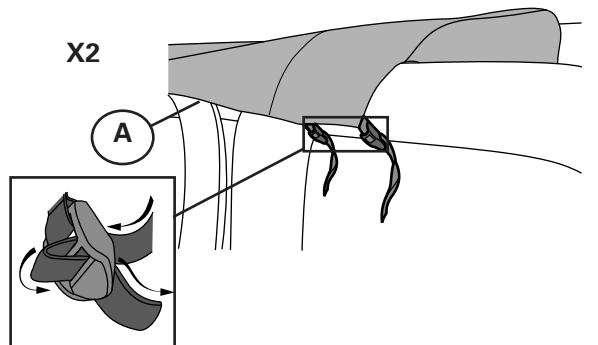

9 Wrap the straps on the rear of the Sunbonnet around the speaker pods, two straps on each side. Thread them through the buckles.

9 Tighten all straps.