



## Reel Rack Assembly Instructions

### Step 1: Parts Included



1x Tire Cover  
4x Rod Tubes  
8x Washers, 8x Bolts, 8x Nuts  
1x Bracket (2 pcs)

---

\*Needed for assembly: Pliers and 9/32 nut driver\*


NOTE: Nut driver with a 9/32 bit (regular sockets don't fit!).






---

**Step 2:** Carefully release the bungee Cord. **Warning: Keep face away when removing and reattaching bungee.** Align the slotted end of the tube to the bracket with the bungee and push in place.

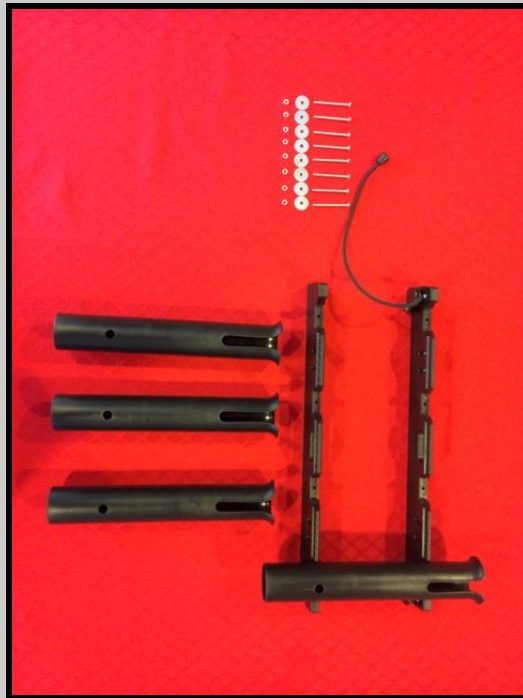

---


**Step 3:** Press tubes into place on bracket.

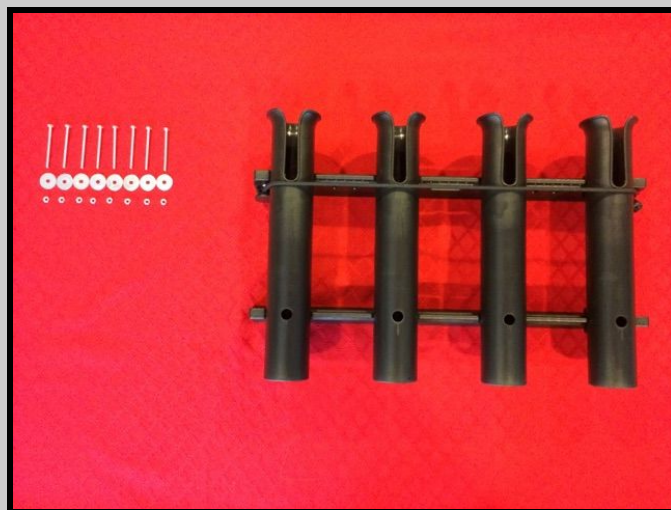



---

**Step 4:** Insert bolt in top far right tube and attach to cover in corresponding hole using washer then nut. **Note:** Placing two fingers in tubes will help align bolts in the holes. Leave all nuts loose until all bolts are in place.

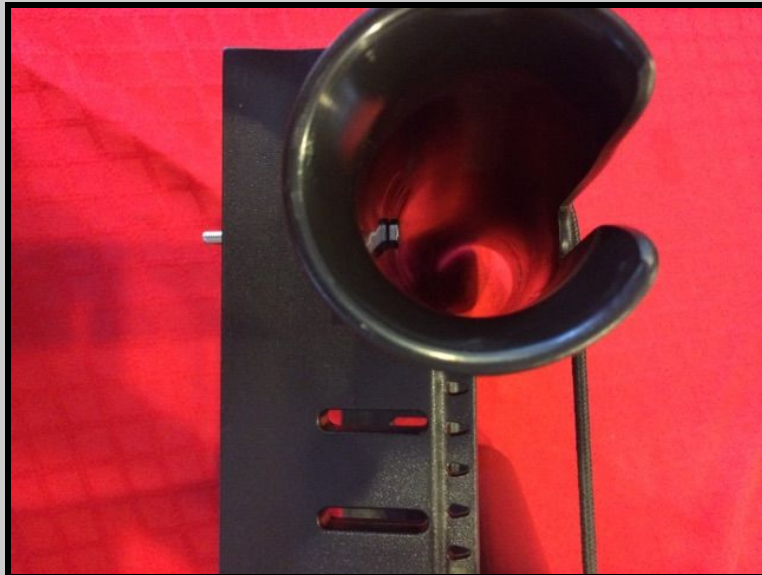


View 1



View 2



**Step 5:** Insert bolt in bottom far left tube, washer then nut, and continue procedure for other six holes. Hand tighten all nuts.

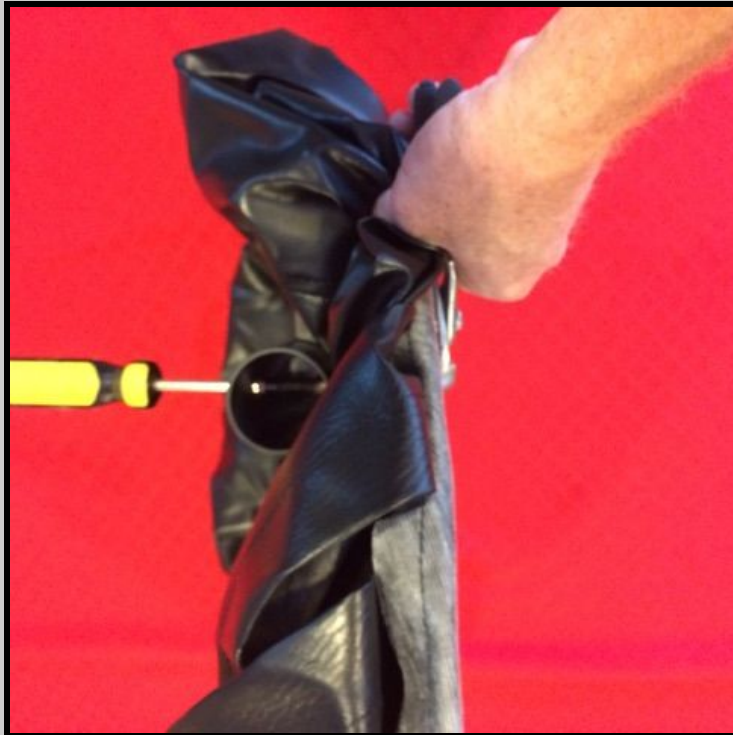

View 1



View 2

